

JACKSEW

Main Office: 13101 56th Ct Ste 804, Clearwater, FL 33760 • Phone/Fax: (727) 335-3434 • Email: info@jacksew.com

SYNCHRONIZER / NEEDLE POSITIONNER INSTALLATION GUIDE

1. HARWARE SPREAD



2. CONNECT THE FIXATION ROD TO THE SYNCHRONIZER




JACKSEW

Main Office: 13101 56th Ct Ste 804, Clearwater, FL 33760 • Phone/Fax: (727) 335-3434 • Email: info@jacksew.com

3. LOCATE THE SHAFT EXTENSION PIECE AND ITS PROVIDED SCREW




4. UNDO THE EXISTING SHAFT SCREW

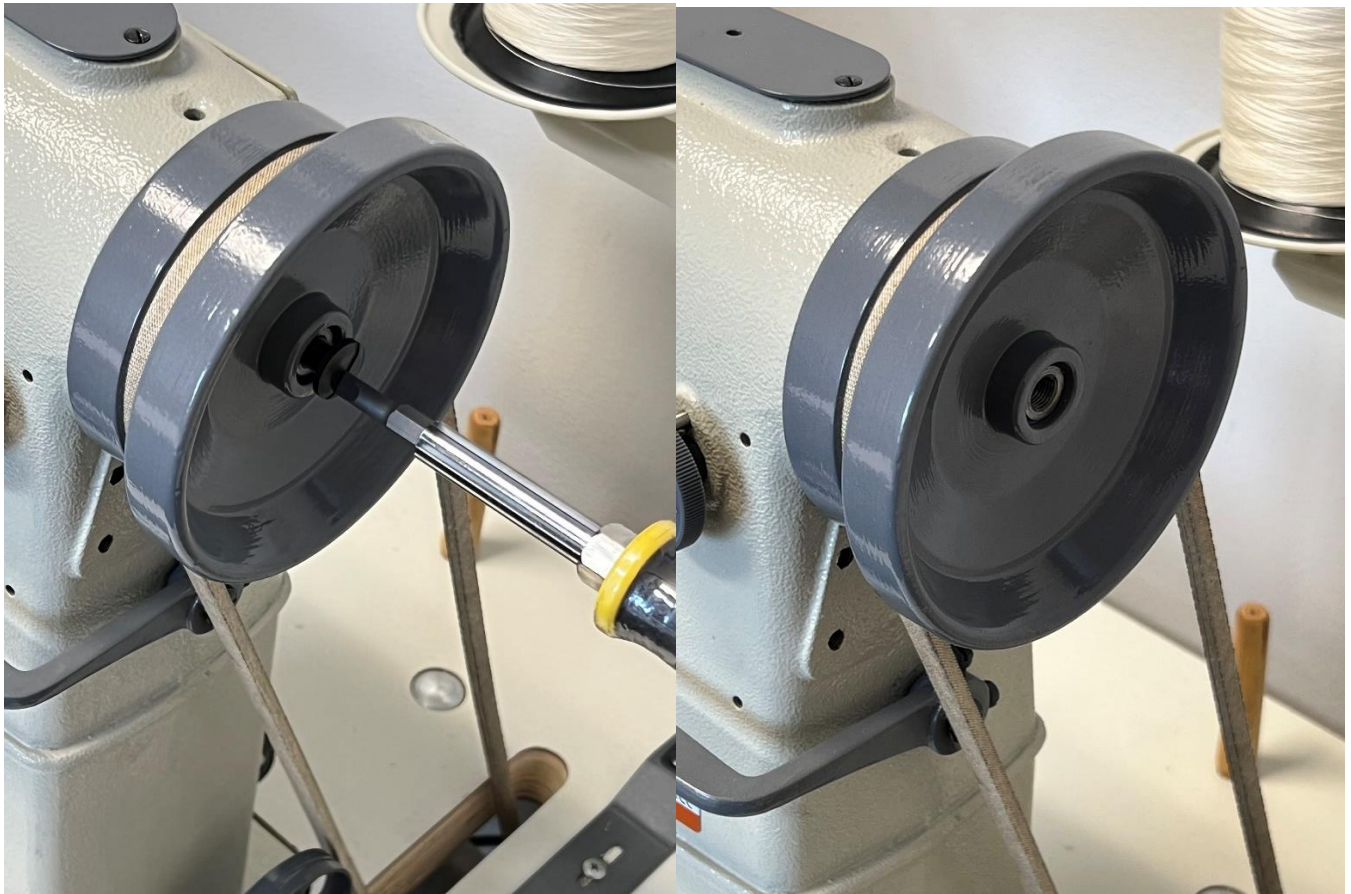


JACKSEW

Main Office: 13101 56th Ct Ste 804, Clearwater, FL 33760 • Phone/Fax: (727) 335-3434 • Email: info@jacksew.com

5. SECURE THE EXTENSION PIECE USING THE SCREW PROVIDED

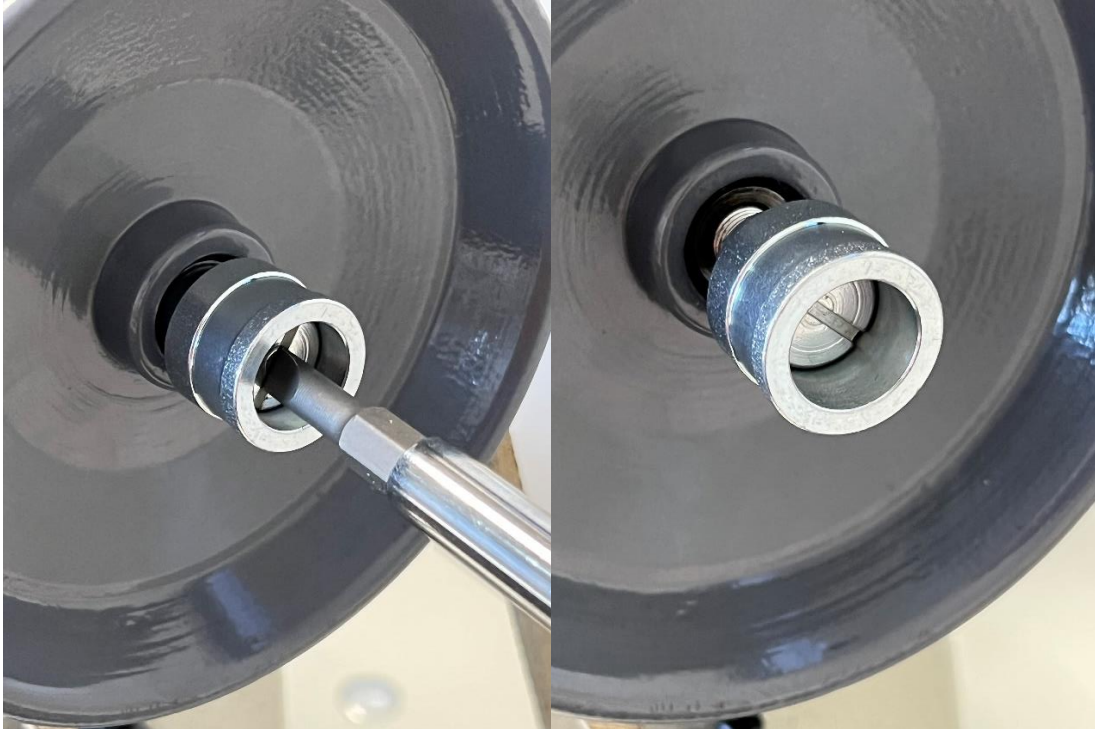


6. SECURE THE SUPPORT ROD ONTO THE MACHINE HEAD

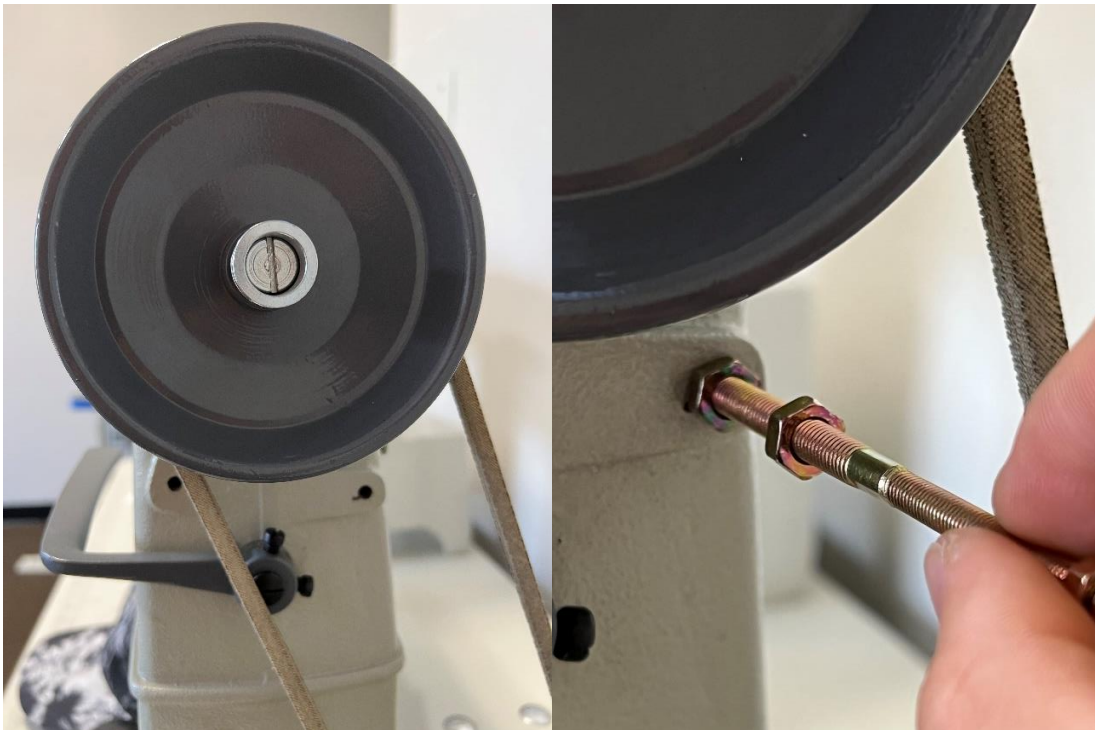


JACKSEW

Main Office: 13101 56th Ct Ste 804, Clearwater, FL 33760 • Phone/Fax: (727) 335-3434 • Email: info@jacksew.com

7. INSTALL THE SYNCHRONIZER AND FASTEN THE HEX SCREWS

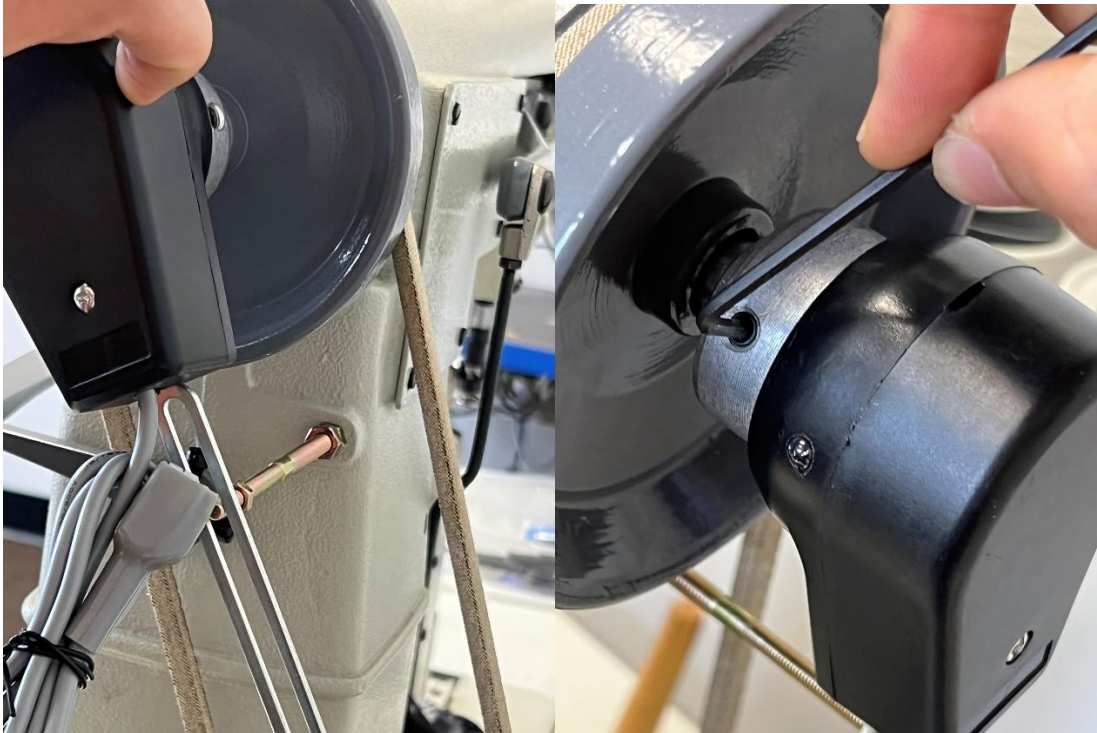

8. FINALLY, THE SYNCHRONIZER IS INSTALLED

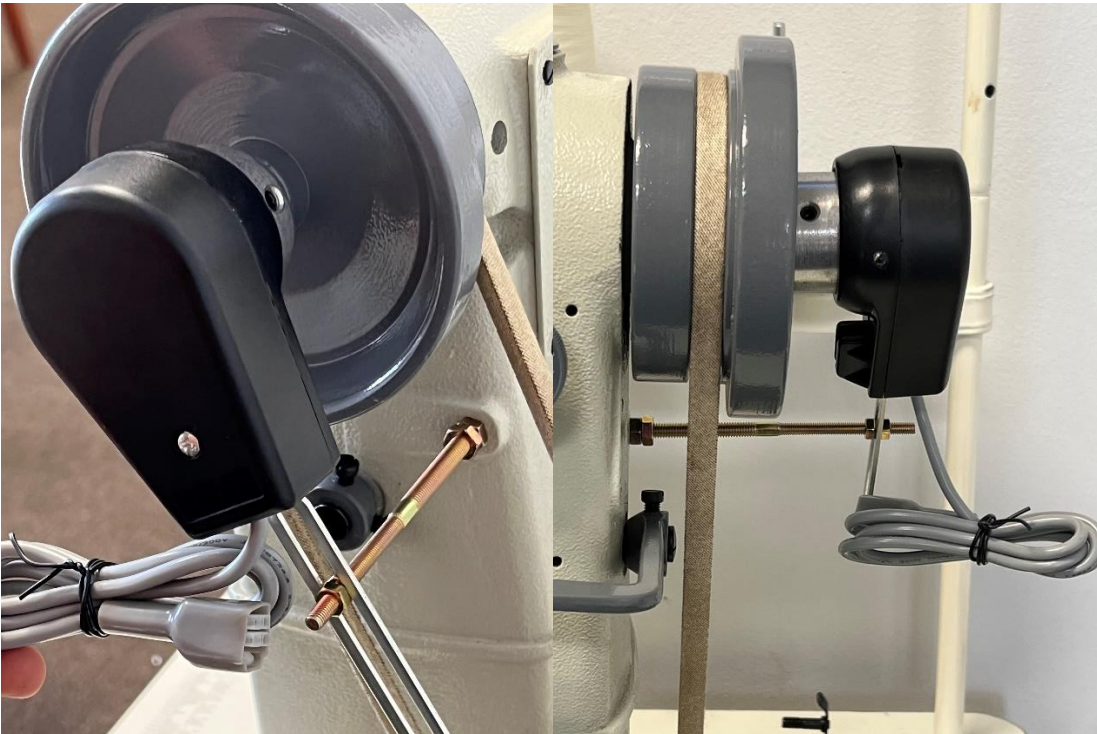



Main Office: 13101 56th Ct Ste 804, Clearwater, FL 33760 • Phone/Fax: (727) 335-3434 • Email: info@jacksew.com

9. LASTLY, YOU MAY ADCQUATELY CONNECT THE CABLE TO YOUR SERVO-MOTOR.

AT THIS POINT, YOU MAY FOLLOW YOUR SERVO-MOTOR OPERATION MANUAL TO ENABLE THE NEEDLE POSITION CONTROL FEATURE.